


KOLO

MODO

PL	SZAFKA BOCZNA WYSOKA	INSTRUKCJA MONTAŻU
EN	SIDE CABINET TALL	INSTALLATION INSTRUCTION
CZ	POSTRANNÍ SKŘÍŇKA VYSOKÁ	NÁVOD NA MONTÁŽ
SK	POSTRANNÁ SKRINKA VYSOKÁ	NÁVOD PRE MONTÁŽ
BG	ШКАФЧЕ СТРАНИЧНО ВИСОКО	ИНСТРУКЦИЯ ЗА МОНТАЖ
UA	ШАФА БОКОВА ВИСОКА	ІНСТРУКЦІЯ З МОНТАЖУ
RU	ШКАФ БОКОВОЙ ВЫСОКИЙ	ИНСТРУКЦИЯ МОНТАЖА
RO	DULAPIOR LATERAL INALT	INSTRUCȚIE A MONTAJULUI
HU	OLDALSÓ SZERÉNY MAGAS	ÖSSZESZERELÉSI ÚTMUTATÓ

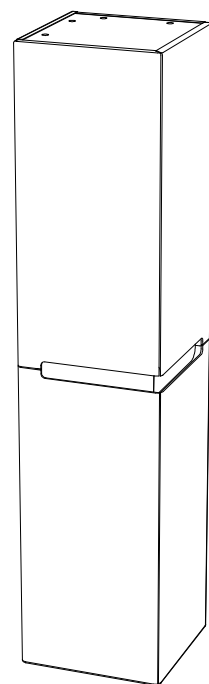

88426



Ø 10 x 60



x 2





x 2




x 4

1

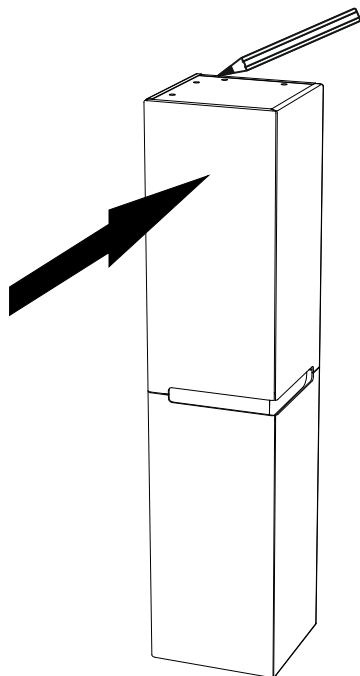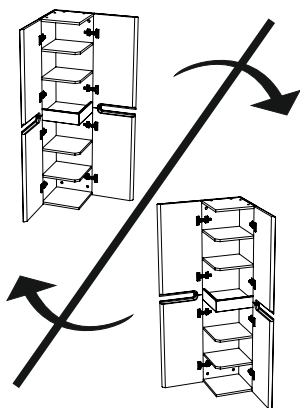

2

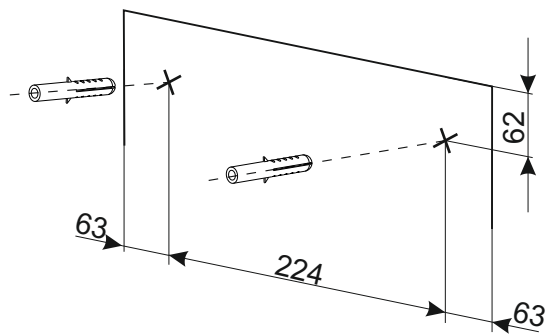

Ø 10



3

