


Zawory kulowe do wody **SKALAR**



INSTALACJE




Zawór kulowy SKALAR WW z rączką

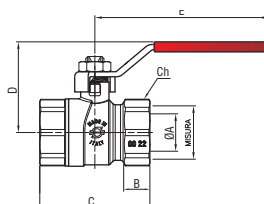

Wymiar	INDEKS	NR KAT.	PN	ØA	B	C	D	E	CH	OP.ZB.
1/2"	ZW-SKA-KURA-WW0100	09811320 / 8360R004	50	14,8	12	47,5	44,5	86	25	36
3/4"	ZW-SKA-KURA-WW0200	09811322 / 8360R005	40	18,5	13	54,5	48	86	31	24
1"	ZW-SKA-KURA-WW0300	09811324 / 8360R006	25	23,5	14,5	64	57	112	38	12
1 1/4"	ZW-SKA-KURA-WW0400	09811326 / 8360R007	25	30	15,5	76	62	112	46	8
1 1/2"	ZW-SKA-KURA-WW0500	09811328 / 8360R008	25	35	17	88	71,5	143	54	4
2"	ZW-SKA-KURA-WW0600	09811330 / 8360R009	16	45	18	103,5	79	143	66	4




Zawór kulowy SKALAR WZ z rączką

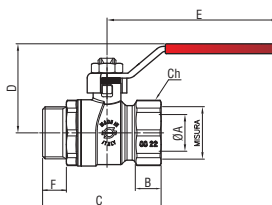

Wymiar	INDEKS	NR KAT.	PN	ØA	B	C	D	E	F	CH	OP.ZB.
1/2"	ZW-SKA-KURA-WZ0100	09811340 / 8361R004	50	14,8	12	53	44,5	86	11	25	36
3/4"	ZW-SKA-KURA-WZ0200	09811342 / 8361R005	40	18,5	13	59,5	48	86	12	31	24
1"	ZW-SKA-KURA-WZ0300	09811344 / 8361R006	25	23,5	14,5	69,5	57	112	13,5	38	12
1 1/4"	ZW-SKA-KURA-WZ0400	09811346 / 8361R007	25	30	15,5	81,5	62	112	14,5	46	8
1 1/2"	ZW-SKA-KURA-WZ0500	09811348 / 8361R008	25	35	17	93	71,5	143	16	54	4
2"	ZW-SKA-KURA-WZ0600	09811350 / 8361R009	16	45	18	110	79	143	17,5	66	4



Zawór kulowy SKALAR WW z motylkiem

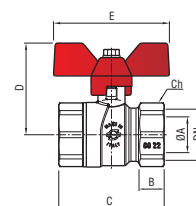

Wymiar	INDEKS	NR KAT.	PN	ØA	B	C	D	E	CH	OP.ZB.
1/2"	ZW-SKA-KUMO-WW0100	8366R004	50	14,8	12	47,5	44,5	60	25	36
3/4"	ZW-SKA-KUMO-WW0200	8366R005	40	18,5	13	54,5	47	60	31	24
1"	ZW-SKA-KUMO-WW0300	8366R006	25	23,5	14,5	64	53,5	65	38	12
1 1/4"	ZW-SKA-KUMO-WW0400	8366R007	25	30	15,5	76	58,5	65	46	8


Zawory kulowe do wody **SKALAR**



INSTALACJE




Zawór kulowy SKALAR WZ z motylkiem

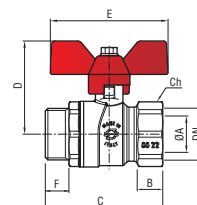

Wymiar	INDEKS	NR KAT.	PN	ØA	B	C	D	E	F	CH	OP.ZB.
1/2"	ZW-SKA-KUMO-WZ0100	8367R004	50	14,8	12	53	44,5	60	11	25	36
3/4"	ZW-SKA-KUMO-WZ0200	8367R005	40	18,5	13	59,5	47	60	12	31	24
1"	ZW-SKA-KUMO-WZ0300	8367R006	25	23,5	14,5	69,5	53,5	65	13,5	38	12
1 1/4"	ZW-SKA-KUMO-WZ0400	8367R007	25	30	15,5	81,5	58,5	65	14,5	46	8




Zawór kulowy SKALAR śrubunkowy z motylkiem

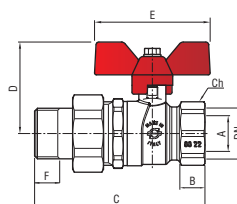


Wymiar	INDEKS	NR KAT.	PN	ØA	B	C	D	E	F	CH	OP.ZB.
1/2"	ZW-SKA-KUMO-SR0100	9811360	50	14,8	12	78	44,5	60	10	25	36
3/4"	ZW-SKA-KUMO-SR0200	9811362	40	18,5	13	87	47	60	12	31	24
1"	ZW-SKA-KUMO-SR0300	9811364	25	23,5	14,5	101	53,5	65	14	38	12
1 1/4"	ZW-SKA-KUMO-SR0400	9811366	25	30	15,5	117	58,5	65	15	46	8

Parametry pracy:

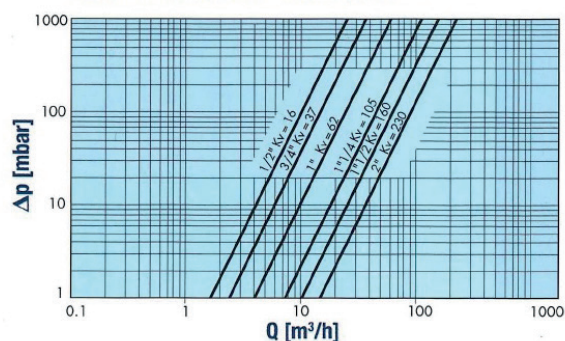

Spadek ciśnienia / Przepływ wody

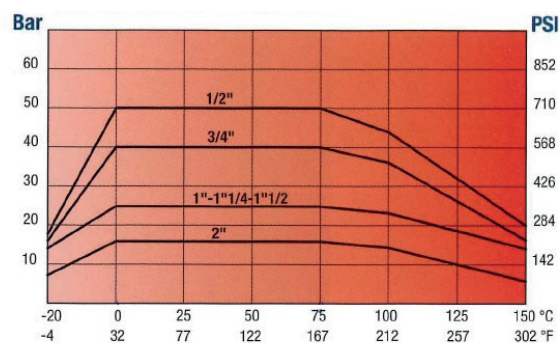

Ciśnienie / Temperatura